

# FLIKT

## WET-TO-STRAIGHT HAIR STYLER USER MANUAL



Please read the user manual carefully before use  
and keep it for future reference.



#### Unlock

Open the machine's arms by sliding the lock button down.

#### LCD Screen

Displays airflow and temperature settings.

#### Temperature control

Five precise temperatures for wet or dry styling, plus optional boost mode.

#### Airflow control

Two speed settings, low flow and high flow.

#### Cool mode

Use to set your style.

 
#### Mode select

Style from wet or dry.

#### Power on/standby

#### Diffusers

Gently diffuse airflow when close to the skin for comfortable styling.

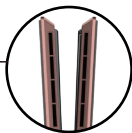

#### Lock button

Slide button to lock and unlock arms.



#### Filter

Removable filter.



# USING YOUR STRAIGHTENER

Your straightener is designed to be used with towel-dried hair, not dripping wet hair. Once towel-dried, detangle your hair with a brush or comb.

---

## STRAIGHTENING FROM WET

1. Before straightening your hair, use to dry the roots of your hair by keeping the arms closed by locking or holding them together. For the best results, use maximum airflow and a higher temperature.
  2. Next, unlock or open the arms and select Wet mode using the mode selector button.
  3. When choosing your temperature, select a lower temperature for fine hair and a higher temperature for thicker hair.
  4. When straightening, hold so that the airflow is directed downwards.
  5. Pass sections of hair through the arms and repeat until each section is dry.
- 

## REFRESH FROM DRY

Use Dry mode only to refresh your style.

1. Unlock the arms and use the Mode select button to set your straightener to Dry mode.
  2. Select your desired temperature and add an additional Boost when needed.
- 

## COOL MODE

Use Cool mode to set your style.

 
1. Hold with the arms shut or lock closed.
  2. Direct the airflow downwards to smooth and set.
- 

## BOOST

Select Boost when styling dry hair for a shot of extra heat.

## ADJUSTING THE TEMPERATURE

Press the Temperature control button to change the setting for your hair type and styling preference.

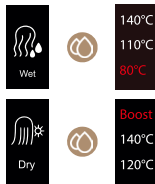

## ADJUSTING THE AIRFLOW

Press the Airflow button to toggle between high and low airflow.



## IDLE MODE

Between passes, your straightener will activate Idle mode. Airflow will reduce, then increase as soon as you close the arms.

## AUTO PAUSE

To save energy, your straightener will Auto pause when left for 15 seconds with the arms open. It will activate again when you pick it up.



## STANDBY

To save energy, your straightener will go into standby if left unattended with the arms open for more than 5 minutes. Press the Power button to re-activate.

## IDLE MODE MAY CAUSE LIGHTS TO DIM

High power products, like the Wet-to-Straight Hair Styler, may cause lights in your home to flicker or dim. They draw more electricity, which temporarily takes power away from other products on the same circuit.

If light dimming occurs when using your straightener, try plugging it in to a different outlet and circuit.

A professional can help to identify suitable outlets.

# SETTINGS

Your Wet-to-Straight Hair Styler has a settings menu to help you customise your machine to your usage. Press and hold the Mode select button to access the menu on the LCD screen.



## IDLE MODE

You can enable or disable Idle mode on your machine.

Press and hold the Mode select button on your straightener until the menu appears.



Press the Cool mode button to toggle between on and off.

## AUTO PAUSE

You can prevent your straightener from Auto pausing.

Press and hold the Mode select button on your straightener until the menu appears.

Use the Mode select button to scroll through the menu options.



Press the Cool mode button to select and press again to toggle between on and off.

## UNITS

Press and hold the Mode select button on your straightener until the menu appears.

Press the Cool mode button to toggle between °C and °F.



# SETTINGS

## TO PERFORM A FACTORY RESET

1. Press and hold the Mode select button on your straightener until the menu appears.
2. Press the Cool mode button to start a factory reset.



---

## EXIT

1. Use the Mode select button to scroll through to the Exit screen.
2. Press the Cool mode button to select.



 
# CLEANING YOUR MACHINE

Your straightener has been precisely engineered. To maintain outstanding styling performance, it needs to be kept free from hair product residue and debris. Regular maintenance will optimise performance.

---

## CLEANING THE FILTER

1. Unplug your straightener and let it cool down before cleaning your filter.
2. Hold the body of your straightener with one hand and the perforated filter unit with the other.
3. Pull down on the filter unit to release it from the machine and onto the cable.
4. Gently pull the filter open and slide it off the cable.

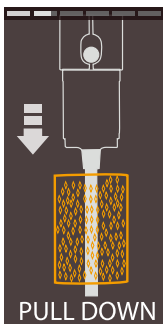

# ALERTS

 
## CLEAN FILTER

You can continue to use your straightener but it is recommended that you clean the filter for optimum performance.



## FILTER BLOCKED

Your straightener won't operate until the filter is cleaned.

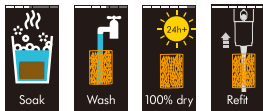

## NO FILTER

The filter isn't fitted correctly or is missing. Your straightener won't operate until it is fitted.



## VOLT ALERT

Your machine has either been plugged into a power source with the incorrect voltage or the voltage is fluctuating.

Plug into a stable, compatible power supply.



## TOO HOT

Your straightener has become too hot and will need to cool down.

Turn off your straightener, unplug, and leave to cool down.

Once cooled, you should plug it in and turn it on.



Too hot



 
Turn off



Unplug



Cool  
down

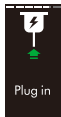

Plug in



Turn on

---

## RESET

Your straightener has an error. Press the Power button to turn off your straightener and then turn it on again.

If this doesn't clear the alert, turn off your straightener and unplug from the power source. Plug in and turn on again.



Reset



Reset

---

## ALWAYS UNPLUG SMALL APPLIANCES.

**AFTER SWITCHING OFF, THE MOTOR WILL CONTINUE TO WORK FOR 6 SECONDS. IT IS NORMAL TO HEAR THE MOTOR AFTER SWITCHING OFF, SO DO NOT UNPLUG IMMEDIATELY TO AVOID DAMAGING THE PRODUCT.**

## STORAGE

- Allow the product to cool, then simply store out of reach of children in a safe, dry location.
- Do not jerk or strain the cord at plug connections.
- Do not wrap the power cable around the product.
- Allow the cord to hang or lie loose and straight at the point of entry into the product.

## CLEANING

- Use a soft dry cloth to clean.
- Always unplug and allow to cool prior to cleaning.
- Never use the following chemicals to clean the product: thinner, gasoline alcohols, or any other flammable chemicals.

## IMPORTANT SAFETY GUIDELINES AND RECOMMENDATIONS FOR USING THIS PRODUCT:

1. Never leave this product unattended when it is plugged in. Always remember to unplug it immediately after use.
2. Close supervision is necessary if the product is being used by children or individuals with certain disabilities.
3. Avoid blocking the air openings of the product and refrain from placing it on soft surfaces such as beds or couches, as this could block the air circulation.
4. Ensure that all the air openings remain free and unobstructed while using the product.
5. Avoid dropping any objects or inserting them into any openings or attachments of the product.
6. Do not use the product outdoors or in environments where aerosol (spray) products are being used or oxygen is being administered.
7. Directing hot air from the product towards the eyes or other heat-sensitive areas should be avoided.
8. While the product is in operation, avoid placing it on sensitive surfaces to prevent any damage.
9. Keep your hair away from the air inlet of the product during use.
10. Do not use the product with a voltage converter or an extension cable.
11. The product should only be used for drying and styling your hair and should not be used for any other purpose.
12. If the product is not functioning properly, has a damaged cord or plug, has experienced a sharp impact, has been dropped, damaged, left outdoors, or submerged in water, do not use it. Contact customer services for further guidance.
13. Avoid handling the plug or product with wet hands to prevent an electric shock.
14. Do not attempt to disassemble the product, as improper reassembly can lead to electric shock or fire hazards.
15. The product should not be used on synthetic hair.
16. This product is intended for indoor use only.
17. Never use it on someone who is sleeping.
18. Never drop or insert any object into any opening.

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this product must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility company, or plugged into any socket where the electrical supply is unstable or likely to be turned off. When the product is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the product is switched off. For additional protection when the product is used in a bathroom, it is recommended that a Residual Current Device (RCD), with a residual operating current not exceeding 30 mA is installed in the electrical circuit supplying the bathroom. Contact a qualified electrical installer for advice.

Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the product.

# IMPORTANT INSTRUCTIONS

BEFORE USING THIS PRODUCT, PLEASE READ THE INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE PRODUCT AND RETAIN FOR REFERENCE.

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

**WARNING: KEEP AWAY FROM WATER**

As with most electrical products, electrical parts are electrically live even when the switch is off.

1. Do not use this product near bathtubs, showers, basins, or other vessels containing water.
2. Do not use the product with wet hands.
3. Do not place or store the product near water.
4. Do not immerse or put under running water, even for cleaning purposes.
5. Do not place in or drop into water or other liquid.
6. Do not reach for the product if it falls into water.
7. Do not leave product in reach of children.

The product can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning the use of the product in a safe way and understand the hazards involved.

Cleaning and user maintenance shall not be made by children without supervision.

Do not allow the product to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the product.

This product has a non-self-resetting thermal cut out safety device to prevent overheating. If the product cuts out, unplug it from the mains supply socket and leave it to cool.

## CABLE SAFETY

These guidelines prioritise safety and proper handling of the power cable, aiming to prevent accidents and maintain the cable's functionality.

1. Check for damage: Before using the power cable, carefully inspect it for any signs of damage. If you notice any damage, do not use the cable.
2. Professional repair: If the supply cable is damaged, it should be replaced or repaired by the manufacturer, their service agent, or someone qualified to handle such repairs. This is important to prevent any potential hazards.
3. Avoid strain: Do not stretch the power cable or subject it to any strain. It should be kept free from any tension or pressure that could lead to damage.
4. Keep away from heat: Ensure that the power cable is not in close proximity to heated surfaces. Heat can potentially damage the cable, so it's important to maintain a safe distance.
5. Proper storage: When not in use, avoid wrapping the cable around the product or any other device. Improper coiling can cause damage to the cable and affect its functionality. Fold the cable together neatly and secure with the velcro fastening.
6. Safe unplugging: When unplugging the cable from the mains supply, avoid pulling on the cable itself. Instead, firmly grasp the plug and disconnect it safely. Pulling on the cable can lead to damage or electrical hazards.
7. Regular inspections: It is recommended to inspect the cable before each use. This will help identify any potential damage or issues that may have occurred since the last inspection, ensuring safety during operation.

## RECYCLING

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it should be handed to an appropriate collection point for the recycling of electrical and electronic equipment. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.